


Waste container

for NOM 11, NOM 18 and NOM 28


1

Make sure that the legs on the filter unit is on its maximum height.

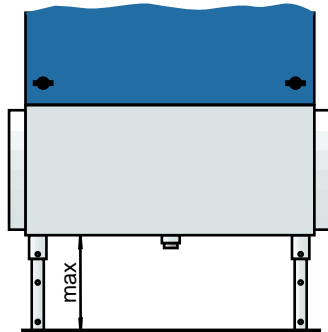


2


Screw the cover of the container away, and place it on the cover holder.

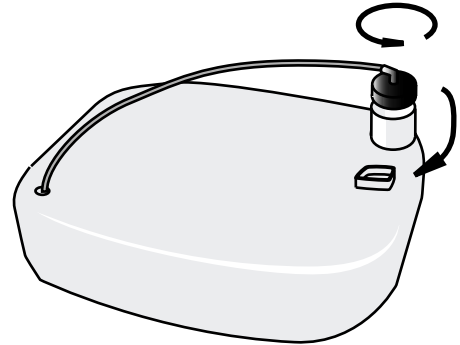

3

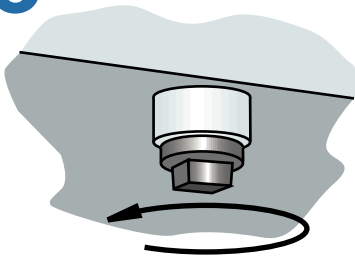


Screw the nipple under the filter unit, away.

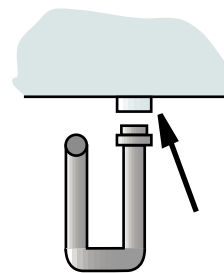

4

Screw the bended pipe in.

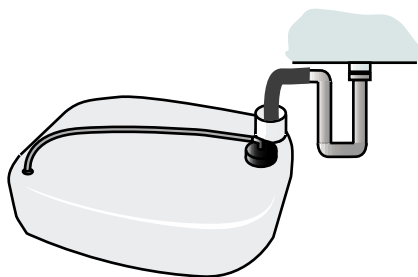


5

Push the container in under the filter unit, and put the hose on the pipe into the opening of the container.

6

Fill the pipe with an appropriate liquid, to make sure that air cannot be drawn back along the oil discharge pipe.

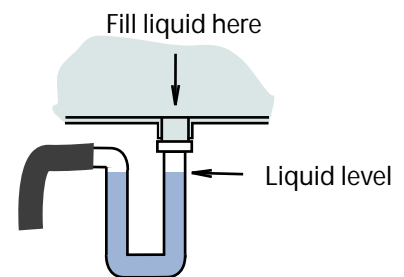

Emptying of the waste container

- 1 Loosen the hose from the container.
- 2 Screw the cover on the opening of the container.
- 3 The container emptys on a appropriate place, according to local regulations.
- 4 After emptying, the container is remounted to the filter unit according to the above instruction.